



Quick Start WASHLET® RG / RG Lite

TCF34270GEU / TCF34170GEU / TCF34120GEU

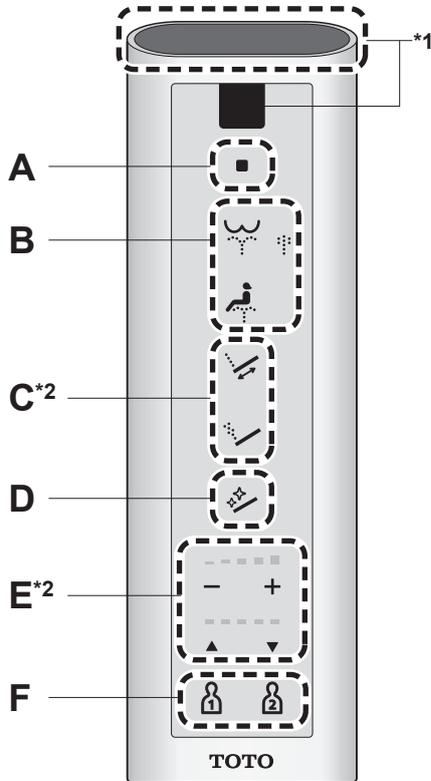

Remote control back side

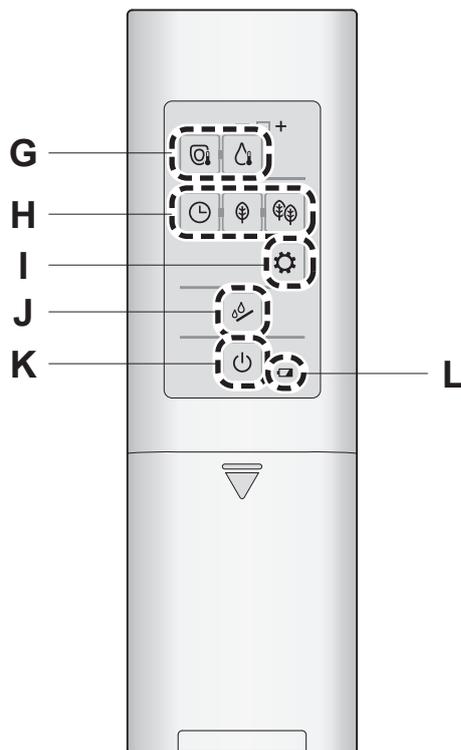

Operate the controls on the remote control; a beep sounds when the main unit receives the signal.

A  **Stop**
Stops B operation.

B  **Rear cleansing**
Cleanses your rear.
 **Rear soft cleansing**
Cleanses your rear with mild water pressure.

The setting changes between  and  each time the  is pressed.

 **Front cleansing**
Serves as a bidet for ladies.

C  **Oscillating cleansing**
The wand moves back and forth to cleanse your rear thoroughly.

 **Pulsating cleansing**
Cleanses with the water pressure pulsating between soft and strong.

The setting changes between "ON" and "OFF" each time the button is pressed.

Note: Sitting back on the toilet seat makes it easier to adjust the wand position and to reduce splashing.

D  **Wand CLEAN**
Cleans the wand with "EWATER+"*3.

After wand cleaning, water comes out from around the wand.

When the "Wand CLEAN" function starts to operate after pressing the button, the Wand CLEAN LED flashes.

Note: This function will operate automatically after using the cleansing functions (Rear cleansing, Front cleansing, etc.).

Note: To clean the wand with it extended.

*1 Remote control transmitter (Front side, Top side)

*2 While using B, these buttons and their functions can be operated.

E

Water pressure adjustment

 You can adjust the water pressure to one of five levels.
  [-] Softer, [+] Stronger

 After you press the "Water pressure adjustment" button, the set position will light for 10 seconds.
 

Wand position adjustment

 You can adjust the washing position to 5 different points between the front and the rear, using the [] and [] buttons.

 After you press the "Wand position adjustment" button, the set position will light for 10 seconds.
 

Once use of the remote control is finished, the settings will return to the initial setting (3rd position) after a while, not exceeding a maximum of 5 minutes.

Note: *Sitting back on the toilet seat makes it easier to adjust the wand position and to reduce splashing.*

F

Personal setting lock

You can store your preferred "Wand position", "Water pressure" and "Warm water temperature" settings.

To store a setting

While cleansing is in progress, set your preferred "Wand position", "Water pressure" and "Warm water temperature" and then press and hold  or  for 2 seconds or longer.

To use

Press  or , and then press the button for the cleansing you want to use.

The "Wand position" and "Water pressure" lamps will light up for about 10 seconds in their set positions, and the "Warm water temperature" display switches.

This section is an overview of the settings that can be configured with the remote control. See the corresponding pages for the detailed descriptions.

G

 **Toilet seat temperature**

 **Warm water temperature**

H

 **Timer energy saver**

 **Auto energy saver**

 **Auto energy saver+**

I

 **Setting confirmation**
The current setting can be discerned from the LEDs.

J

 **Wand cleaning**

To clean the wand with it extended.
When exchanging the spray nozzle

K

 **Power ON/OFF**
Pressing it about 3 seconds or longer turns the power on/off.
▶ If the remote control is secured to prevent theft

L

 **Low battery warning mark**